



YEMA FLYGRAF BI-COMPAX FRENCH AIR FORCE WATCHES



POSITION A PUSHED-DOWN POSITION

Your Yema watch is equipped with a pushed-down crown. A push-down crown ensures waterproofness by sealing the crown to the case of the watch




POSITION B TIME SETTING

In order to adjust the time, pull out the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation allowing the time to be set accurately.

If the crown is pulled to **POSITION B** while the chronograph is started, the chronograph hands will continue to move. This is not a malfunction.

CHRONOGRAPH FUNCTIONS

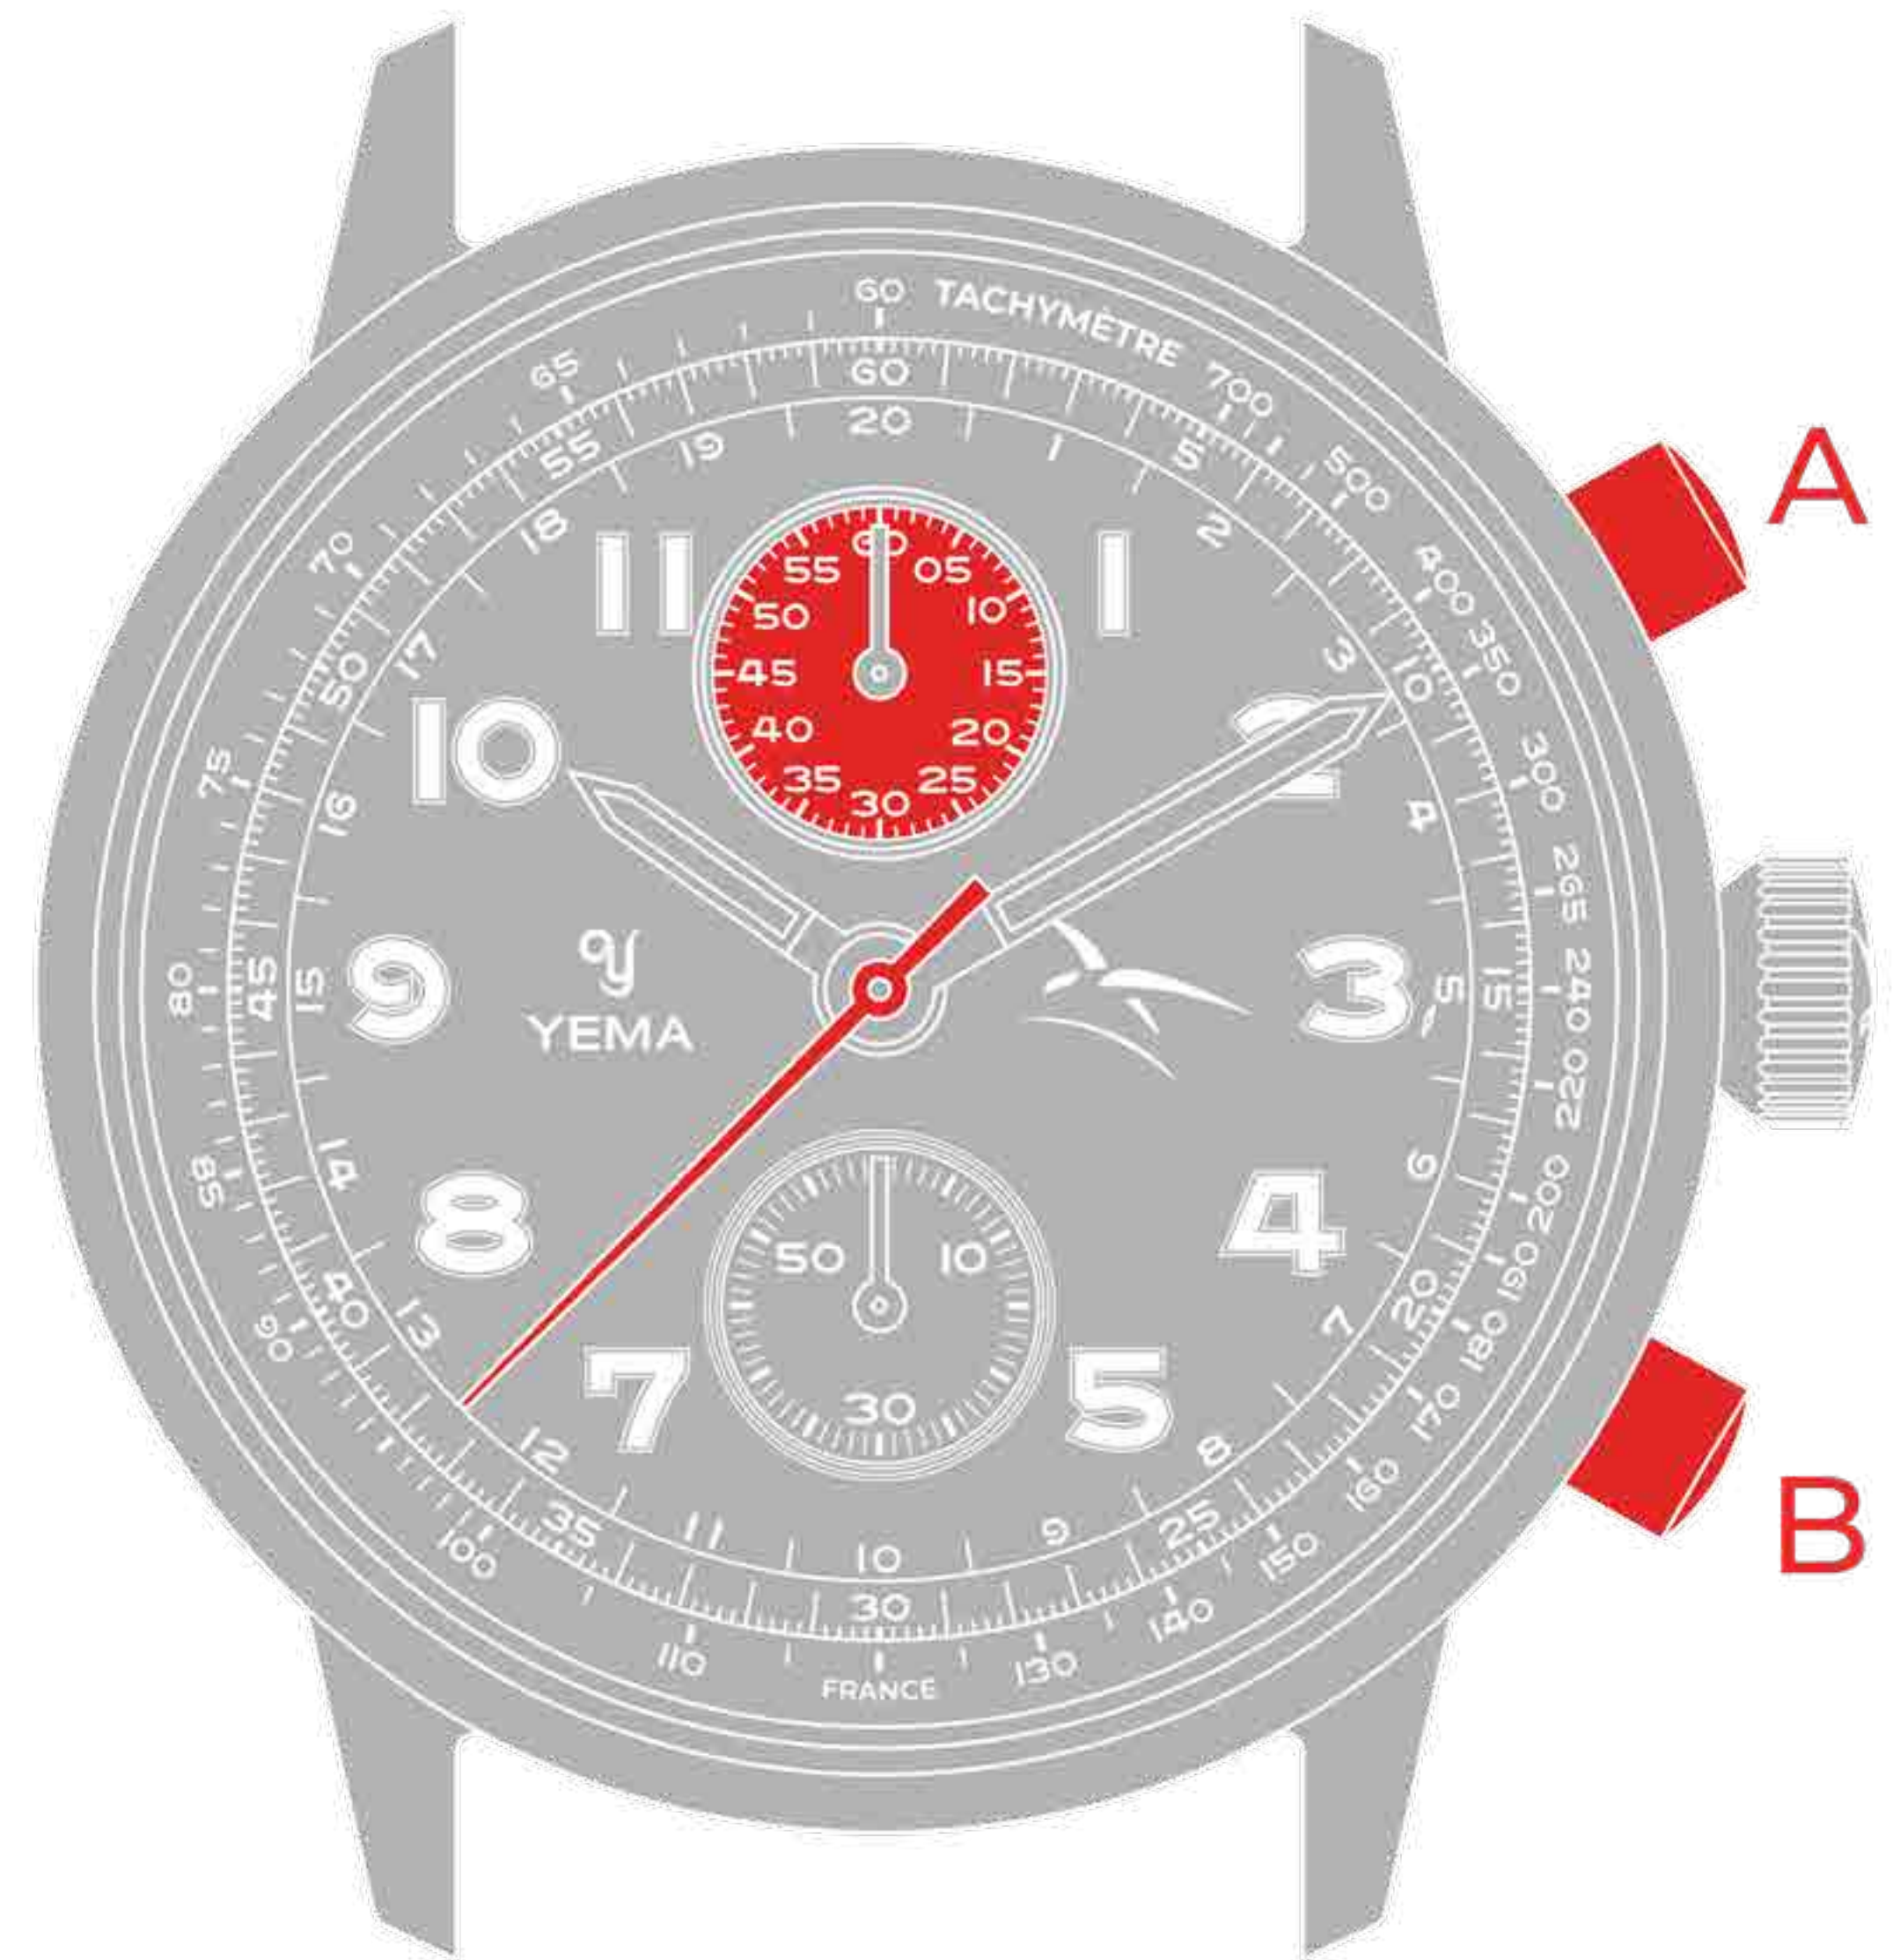

CHRONOGRAPH FUNCTION - START/STOP/RESET

Press pusher **A** to start the chronograph. The chronograph hands will start moving.

Press pusher **A** again to stop the chronograph. The chronograph hands stop to indicate the elapsed time.

The center 1/5 chronograph second hand displays the elapsed seconds while the 12 O'clock sub-register shows the elapsed minutes (maximum 60 minutes)

Press pusher **B** to reset the chronograph. All the chronograph hands will be reset to "0" position.

**CHRONOGRAPH FUNCTION
TACHYMETER**



CHRONOGRAPH FUNCTION - TACHYMETER

The outer dial scale on your watch has a tachymeter scale used to measure a speed or a flow rate using the chronograph function. Select the desired unit of measurement (metre, kilometre, mile, litre, etc.), activate the chronograph and stop it when the desired unit is reached.

The centre seconds hand indicates the number of units per hour on the tachymeter scale.

In order to ensure the precision of the tachymeter, the unit of measurement must be exactly reached. In addition, the time of measurement should not exceed 1 minute and should not be less than 9 seconds.

**CHRONOGRAPH FUNCTION
TELEMETER**



CHRONOGRAPH FUNCTION - TELEMETER

The inner dial scale on your watch has a telemeter scale. A telemeter is used to have a comparison between the vision of an event and the time it takes for the sound to be heard.

The military used it as an instrument which was useful for determining the distance separating several troops based on shots or detonations.

An example of modern use :

If you see lightning on the horizon and trigger the chronograph immediately by pressing the push button located at 2 o'clock. As soon as you hear the sound of thunder with your own ears, press the same pusher again to stop the chronograph. Let's say the hand has stopped at around 44 seconds. The conclusion is very simple : the scale indicates 15 and the lightning therefore occurred approximately 15 kilometers away.

MAINTENANCE
OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA :

- Ensure that the crown is perfectly screwed down/pushed after winding up the movement and/or the setting the time and the date. Once the crown is fully screwed down against the case, your YEMA watch is guaranteed waterproof.
- Avoid activities that may expose your watch movement to shocks.
- Never use chemicals to clean your YEMA watch. Use a microfiber cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- Always rinse your watch with fresh water after it's been exposed to salt water.

CALIBER : VK 61

MODELS :

YEMA FLYGRAF BI-COMPAX FRENCH AIR FORCE - YMHF1582AA-GG

YEMA FLYGRAF BI-COMPAX FRENCH AIR FORCE - YMHF1582AA-AA

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.