




YEMA FLYGRAF FLIEGER FRENCH AIR FORCE WATCHES



A



B

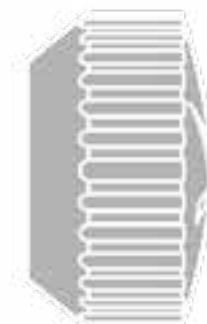

C




POSITION A PUSHED-DOWN POSITION

Your Yema watch is equipped with a pushed-down crown. A push-down crown ensures waterproofness by sealing the crown to the case of the watch.

POSITION A MANUAL WINDING

Your Yema watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if not worn for a long period of time, you will need to wind it manually by turning it clockwise in the pushed-down position.

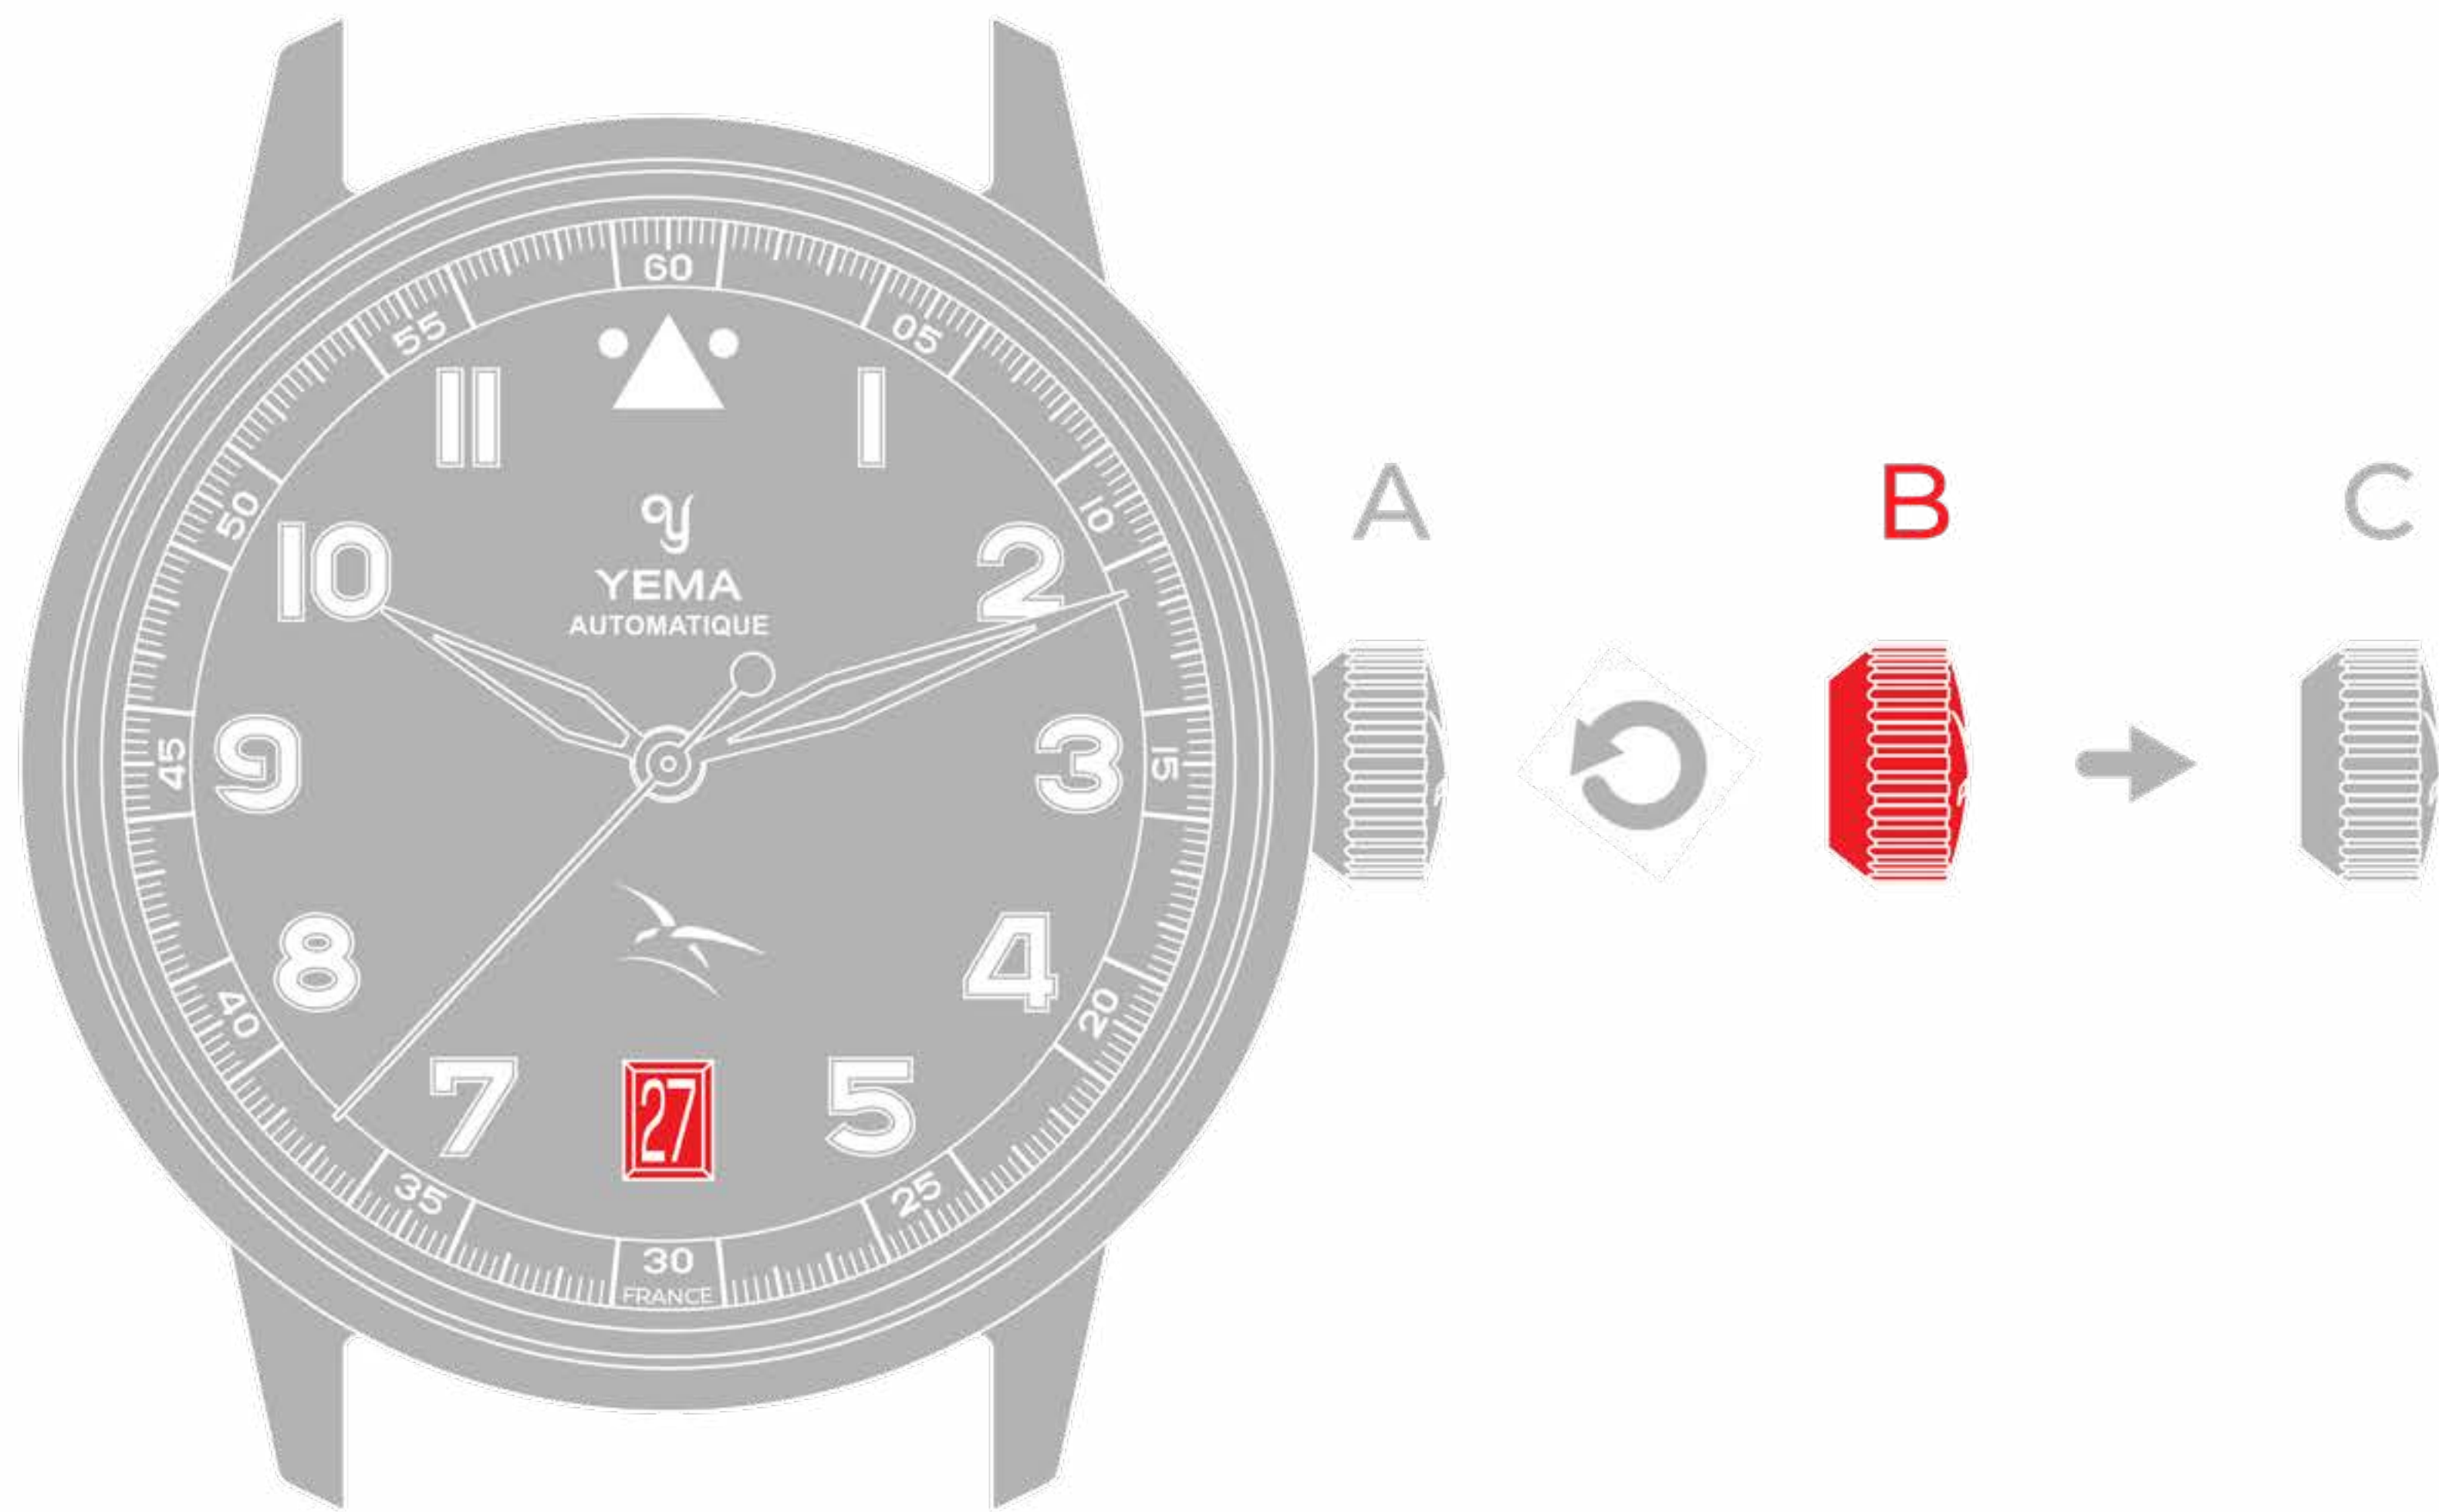

POSITION B RAPID DATE SETTING

If your YEMA watch is equipped with a date, to adjust the date, pull the crown out to the first notch. Then simply turn it clockwise until the desired date appears in the window. During this operation, your watch will keep running.

IMPORTANT : Do not make date adjustments when the time on the watch reads between the hours of 9:00pm and 3:00am. The reason is that although a date makes its changeover close to midnight, the gears that make that change happen to engage quite a bit earlier. It takes extra time to disengage completely in the aftermath.



POSITION C TIME SETTING

In order to adjust the time, pull out the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation allowing the time to be set accurately.

MAINTENANCE
OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:

- Ensure that the crown is perfectly screwed down after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down against the case, your YEMA watch is guaranteed waterproof.
- Avoid activities that may expose your watch movement to shocks.
- Never use chemicals to clean your YEMA watch. Use a microfibre cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- Always rinse your watch with fresh water after it's been exposed to salt water.

IN-HOUSE CALIBER : YEMA2000 POWER RESERVE : 42 H

MODELS :

**YEMA FLYGRAF FLIEGER FRENCH AIR FORCE | YFLY24AA-ZES
YEMA FLYGRAF FLIEGER FRENCH AIR FORCE | YFLY24AA-GGS
YEMA FLYGRAF FLIEGER FRENCH AIR FORCE | YFLY24AA-AASS**

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.