



YEMA URBAN CLASSIC WATCHES



POSITION A PUSHED-DOWN POSITION

Your YEMA watch is equipped with a pushed crown. A pushed-down crown ensures waterproofness by sealing the crown to the case of the watch.

POSITION A MANUAL WINDING

Your YEMA watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if not worn for a long period of time, you will need to wind it manually by turning it clockwise in the pushed-down position.



POSITION B TIME SETTING

In order to adjust the time, pull the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation, allowing the time to be set accurately.

MAINTENANCE
OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:

- Ensure that the crown is perfectly screwed down after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down against the case, your YEMA watch is guaranteed waterproof.
- Avoid activities that may expose your watch movement to shocks.
- Never use chemicals to clean your YEMA watch. Use a microfibre cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- Always rinse your watch with fresh water after it's been exposed to salt water.

YEMA IN-HOUSE CALIBER : YEMA2000 POWER RESERVE : 42 H

MODELS :

YEMA URBAN CLASSIC | YUBC24-37-JU64

YEMA URBAN CLASSIC | YUBC24-37-GG64

YEMA URBAN CLASSIC | YUBC24-37-AA64

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.